

Note 5:

Please prepare latest firmware updating disc.

*Main Firm is being recorded in HDD, but new HDD has no data.

CAUTION:

- Writing of Main Firm needs 3, 4 minutes.
- Never cut the power of DVD Recorder until writing of Firmware ends.
- Initial settings and contents of reservation will not change if writing is normally completed.

Writing Procedure of Main Firm:

1. Prepare updating disc from firm ware
2. Replace HDD
3. Turn on power of DVD Recorder
4. After [PLEASE WAIT] is displayed on FL., [HDD ERR] is displayed on FL
5. Tray opens automatically
6. Insert updating disc for Firmware and press OPEN / CLOSE key
(If a wrong disc was inserted, [NG DISK] [NO FVU] is displayed on FL.)
7. [LOAD] -> [LD FVU] <- -> [M_Firm] are displayed on FL alternately
8. [MAIN] <- -> [UPD OK] blink alternately and Tray opens. Take out disc (writing was finished)
9. Press Power button to turn off power
10. Press Power button to turn on power
11. [Hello] -> [SELF CHECK] are displayed of FL
12. [UNFORMAT] is displayed on FL
13. After [UNFORMAT] is displayed, message of request FORMAT is displayed on TV screen
14. Select [YES] and press [ENTER] key to format HDD
(after FORMAT, program in HDD will be lost, but Main firm will not be lost
"Write of the main firm" is completed above)

* Drive firm is not updated by above operation. If you wish to update Drive firm, please prepare the disc for latest firmware update, and write again.

* If the version of the firm you have prepared was same as or later than has already been written in deck, "UNSUPPORT" is displayed on FL.

* In a usual updating of firmware, writing is not performed when the timer reservation standby was not released.