

Telephone:
Fax:
VAT Registration No.:

Name:	Manufacturer:	Citroen
Address:	Model:	
	Year:	2001
	Registration:	
Tel - Private:	Mileage:	
Tel - Business:	Job number:	
Tel - Mobile	Date	

A16	ABS control module
H29	ABS warning lamp
A137	Airbag control module
A189	Airbag side assembly control module, driver
A190	Airbag side assembly control module, passenger
H98	Airbag warning lamp
H110	Airbag warning lamp, side assembly
A23	Alarm system control module
G1	Alternator
H1	Alternator warning lamp
31	Battery -
30	Battery +
H18	Brake fluid level warning lamp
S33	Brake fluid level warning lamp switch
B12	Brake pad wear sensor, left front
B13	Brake pad wear sensor, right front
H28	Brake pad wear warning lamp
A31	Central locking control module
S6	Combination switch
B54	Crankshaft position (CKP) sensor
X1	Data link connector (DLC)
H52	Door open warning lamp, left or single
EP1	Earth point location 1
EP11	Earth point location 11
EP6	Earth point location 6
A35	Engine control module (ECM)
H22	Engine coolant 'hot' warning lamp
P4	Engine coolant temperature gauge
B4	Engine coolant temperature gauge sensor
H63	Engine malfunction indicator lamp (MIL)
B86	Engine oil level sensor
H37	Engine oil level warning lamp
H5	Engine oil pressure warning lamp
S25	Engine oil pressure warning lamp switch
P5	Engine oil temperature gauge

B156	Engine oil temperature sensor
S293	Engine oil temperature switch
H57	Engine oil temperature warning lamp
H20	Fog lamps ON warning lamp, front or single
H91	Fuel filter warning lamp
P3	Fuel gauge
B3	Fuel gauge tank sensor
H15	Fuel 'low' warning lamp
F	Fuse
K22	Glow plug relay
H25	Glow plug warning lamp
H17	Handbrake ON warning lamp
S35	Handbrake warning lamp switch
H2	Headlamp high beam warning lamp
H55	Headlamp low beam ON warning lamp
S30	Heated rear window switch
H16	Heated rear window warning lamp
15	Ignition switch - ignition ON
H109	Immobilizer warning lamp
H8	Indicator lamp, left front
H7	Indicator warning lamp, right
R4	Instrument illumination rheostat
A5	Instrument panel
E11	Instrument panel lamp(s)
H67	Oxygen sensor (O2S) warning lamp
H21	Rear fog lamps ON warning lamp
S123	Seat belt contact switch, driver
H32	Seat belt warning lamp
H74	Side lamps ON warning buzzer
H112	Stop engine warning buzzer
H111	Stop engine warning lamp
S115	Suspension fluid pressure switch
P7	Tachometer
A57	Transmission control module (TCM)
H27	Transmission shift warning lamp(s)
Y117	Transmission valve block
B33	Vehicle speed sensor (VSS)
P9	Vehicle speedometer
H33	Windscreen washer fluid 'low' warning lamp
S136	Windscreen washer fluid 'low' warning lamp switch

bl = blue	br = brown	el = cream	ge = yellow
gn = green	gr = grey	nf = neutral	og = orange
rs = pink	rt = red	sw = black	vi = violet
ws = white	hbl = light blue	hgn = light green	rbr = maroon
x = braided cable	y = high tension	z = non-cable connection	

NOTE: In certain diagrams (Citroen, Peugeot & Renault), colour codes are replaced by numbers which are used to identify a particular cable and not the colour. In this instance, the cables will be numbered at each end close to the harness connector.

