



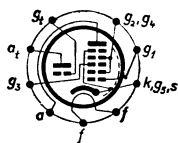


Stisknuté tlačítko		Spojené doteky	Rozpojené doteky
0	P1	1–2	2–3, 3–4, 6–7, 8–9, 10–11
	P2	–	20–21, 22–23
I	P1	3–4, 6–7, 10–11	1–2, 2–3, 8–9
	P2	20–21, 22–23	–

Stisknuté tlačítko		Spojené doteky	Rozpojené doteky
II	P1	2-3, 8-9	1-2, 3-4, 6-7, 10-11
	P2	20-21, 22-23	-
III	P1	1-2	2-3, 3-4, 6-7, 8-9, 10-11
	P2	20-21, 22-23	-


R																				
C	33, 1,	2,	3, 4, 5,	6,	7,	9, 23,	11,	8, 35,	13, 14,	12, 30, 16, 17, 18, 31,	19,	10,	20,							
L	1,	2, 4,	3, 5, 6,								35, 36, 37, 38, 39,	7, 9, 10, 8,	11,	12,						

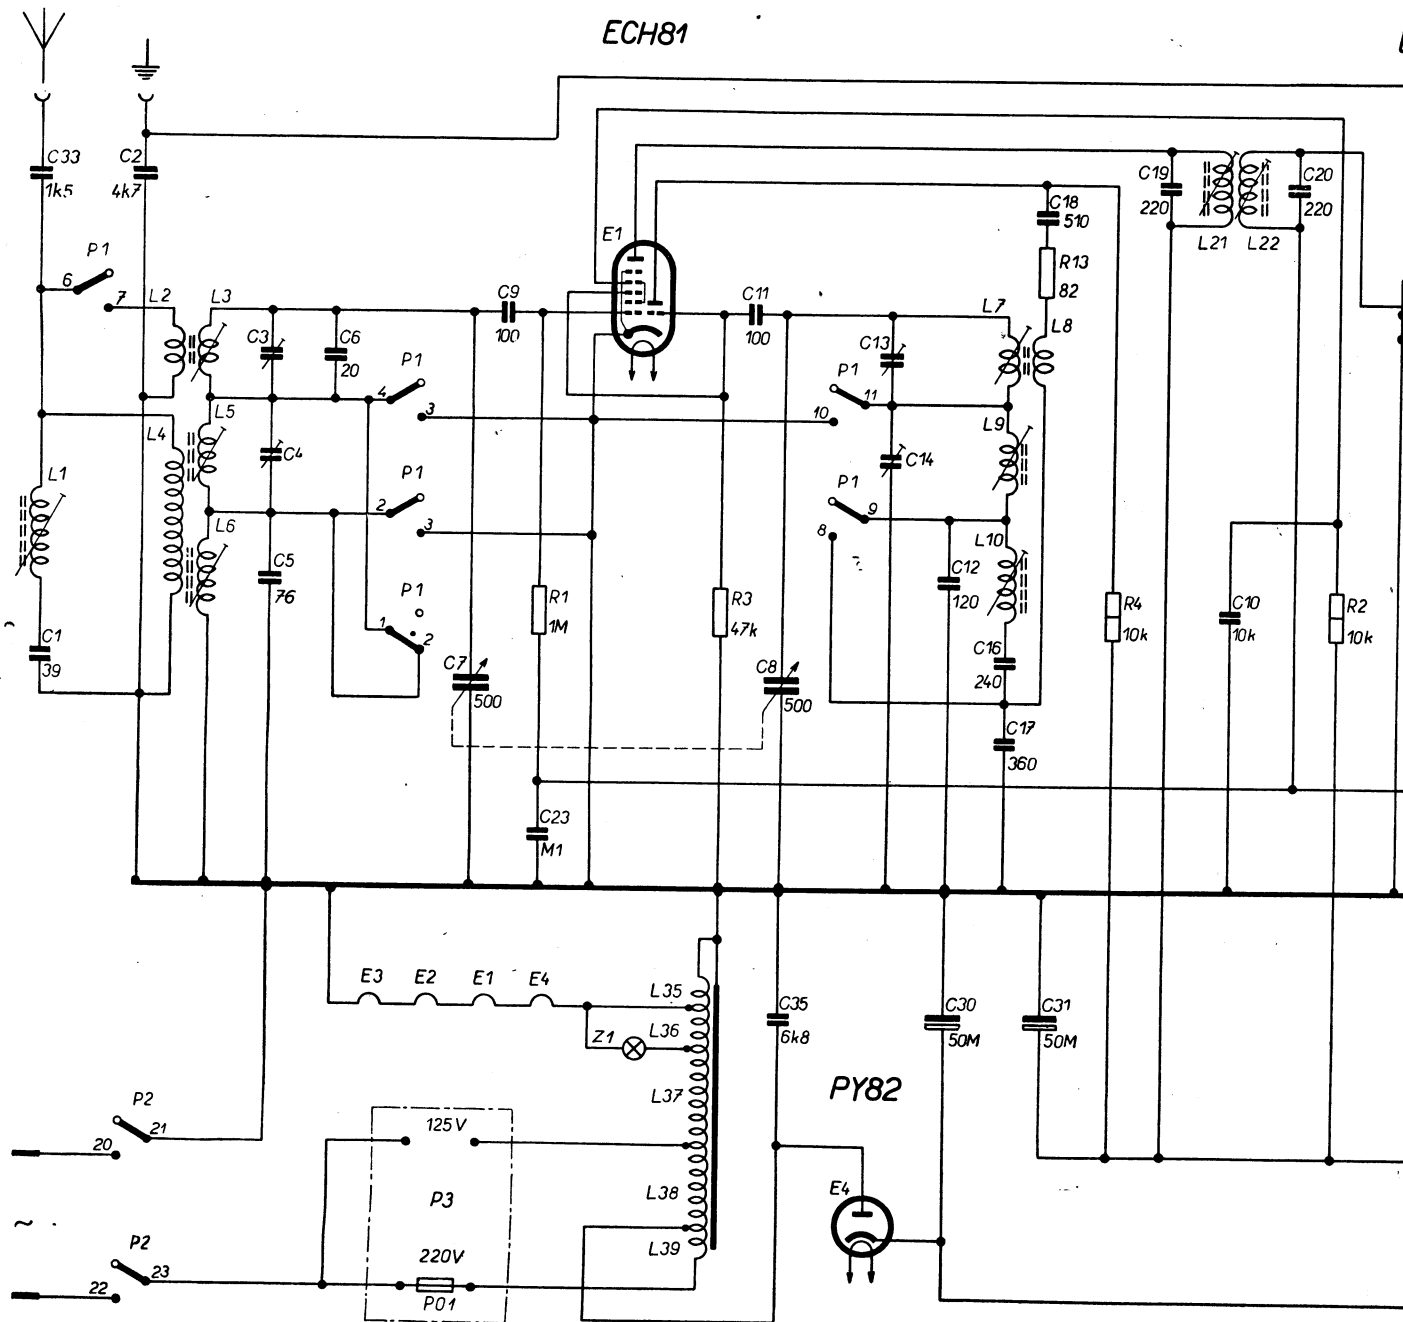


ECH81

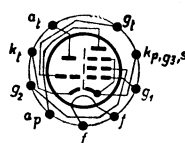

PCL81

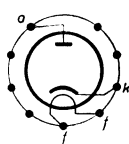

PY82

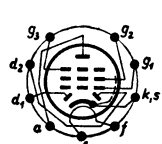

EBF 89

1J5	1.5 pF	0.1 W
100	100 pF	0.25 W
10k	10000 pF	0.5 W
1M	1 μF	1 W
1G	1000 μF	2 W
10	10 Ω	3 W
1M1	0.1 MΩ	4 W
1M	1 MΩ	5 W

TLAČÍTKOVÝ PŘEPÍN

Stisknuté tlačítko	
0	P1
	P2
I	P1
	P2