


Wiring Diagram

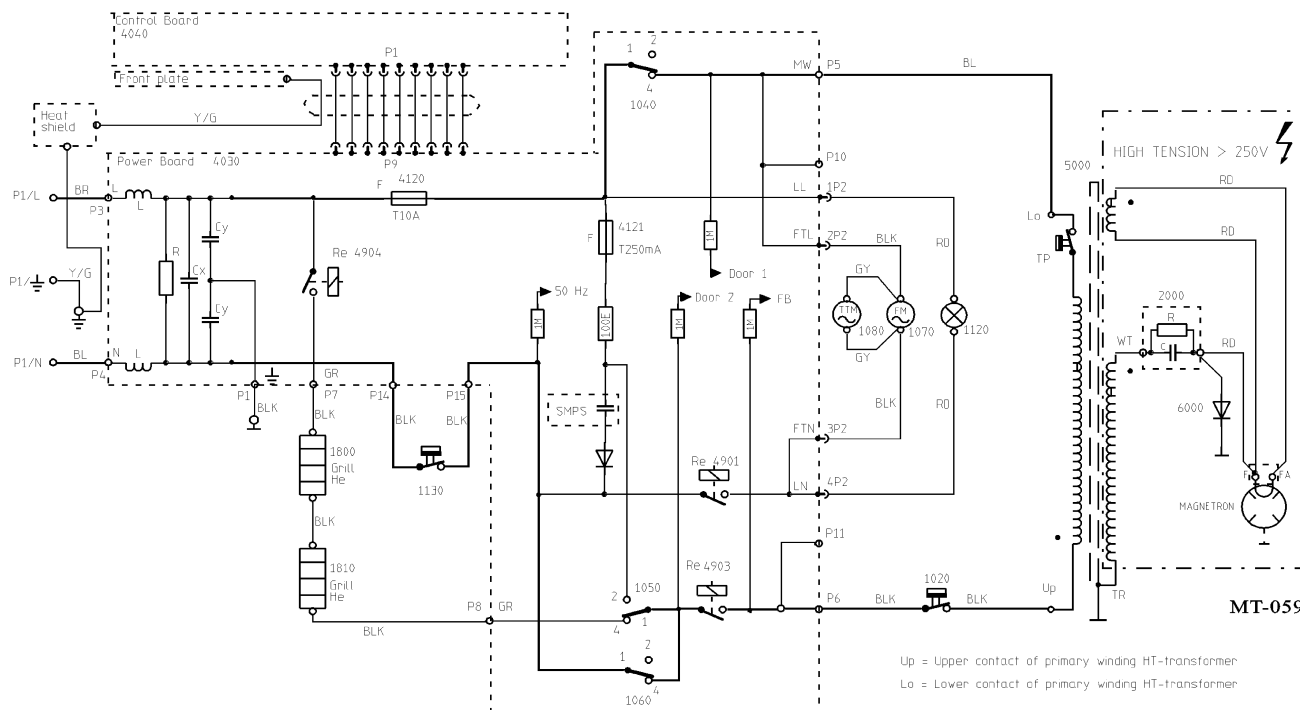

LOUR CODE	FARBKODE	CODE DE COULEUR
Y/W	YELLOW	GELB JAUNE
WT	WHITE	WEISS BLANC
RD	RED	ROT ROUGE
GY	GREY	GRAU GRIS
BR	BROWN	BRAUN BRUN
BLK	BLACK	SCHWARZ NOIR
BL	BLUE	BLAU BLEU
Y/G	YELLOW-GREEN	GELB-GRÜN JAUNE-VERT

1040=Secondary door switch
1050=Monitor door switch
1060=Primary door switch

Oven in off position
with door closed
Herd abgeschaltet
Tur geschlossen
Four debranché
porte fermée

80000625