


JT198KP4LS4 Service Manual


5. BLOCK DIAGRAM

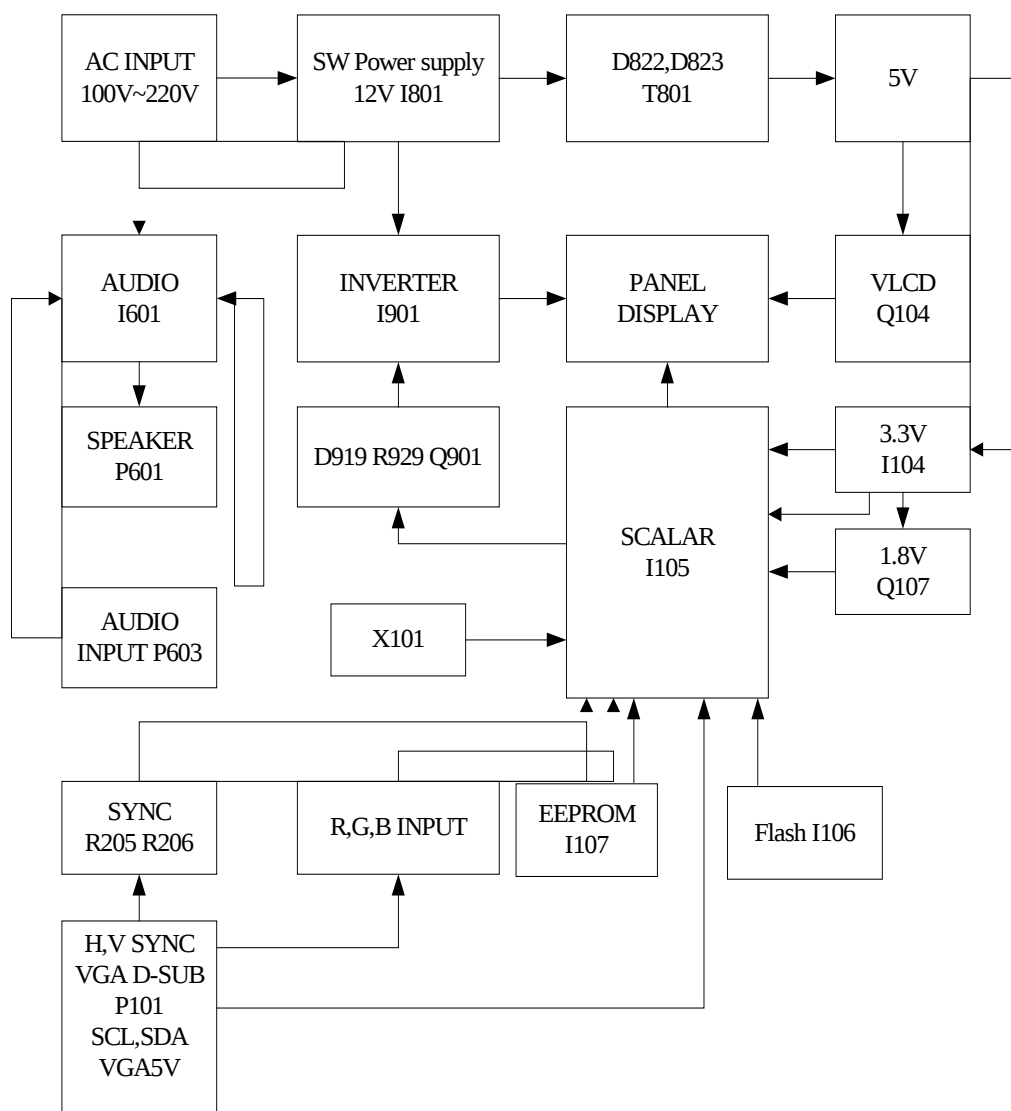

JT198KP4LS4 Service Manual


6. SCHEMATIC DIAGRAM

6.1. Input

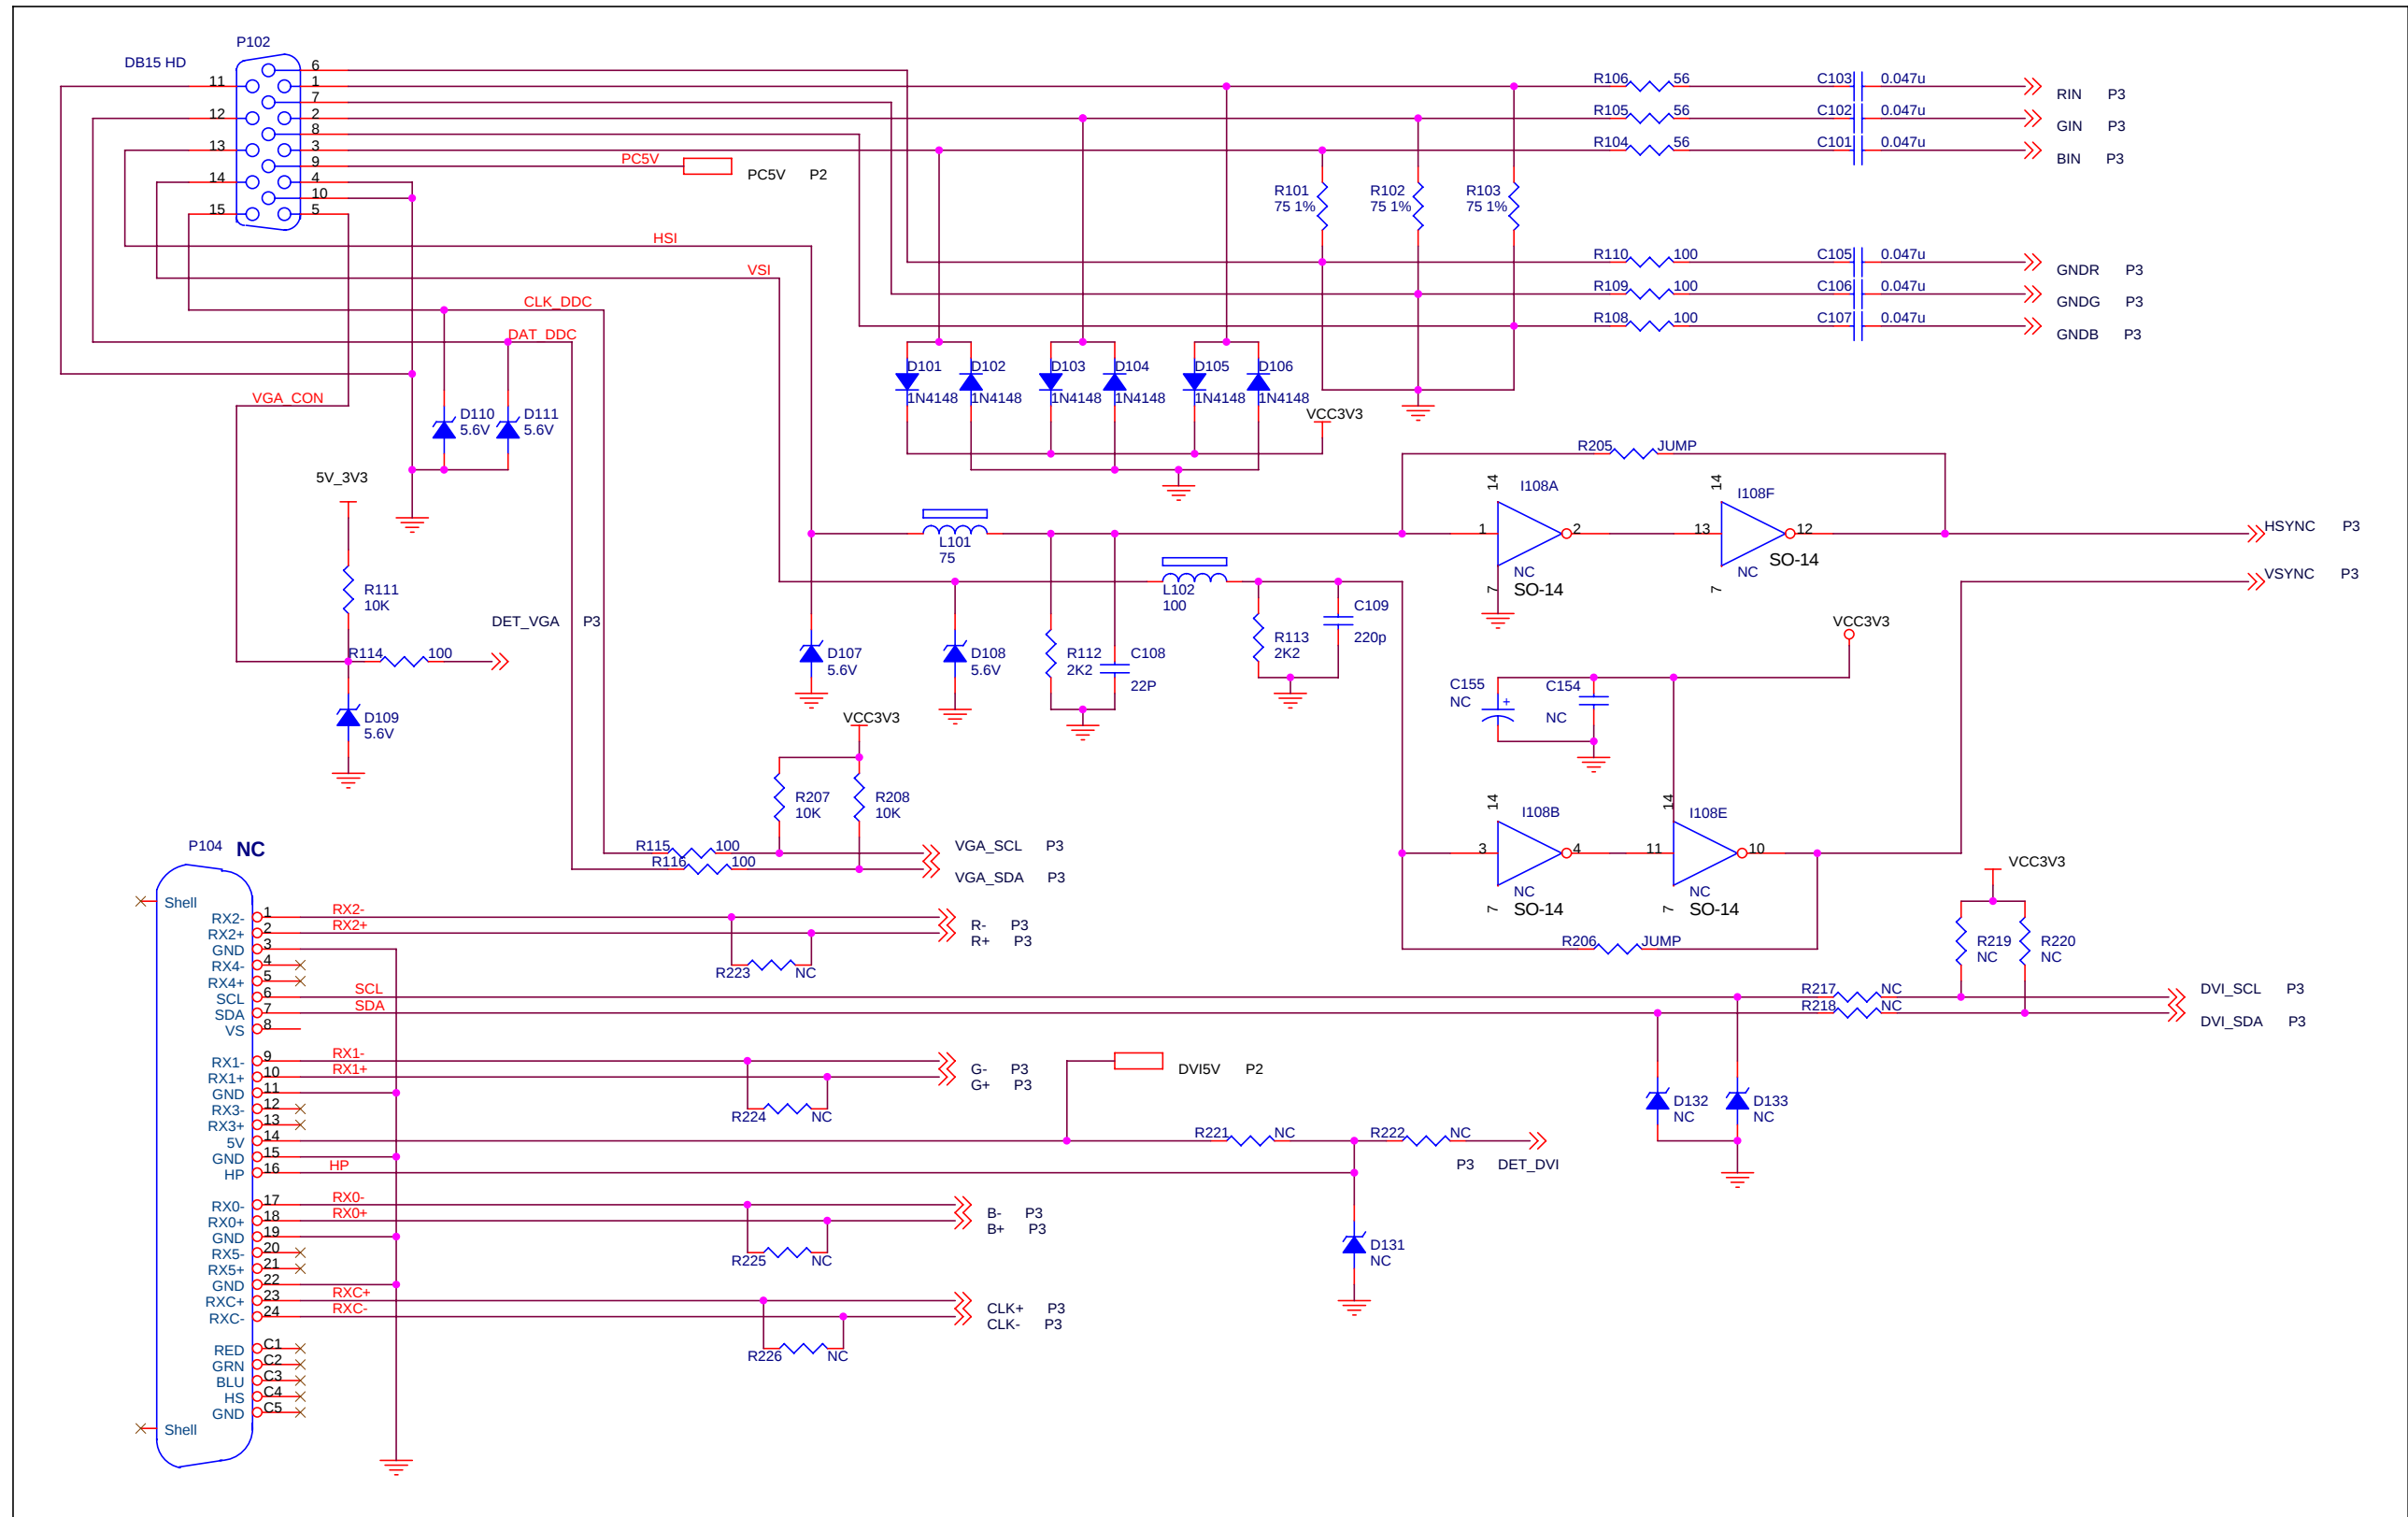


JT198KP4LS4 Service Manual

6.2. Dc to Dc power

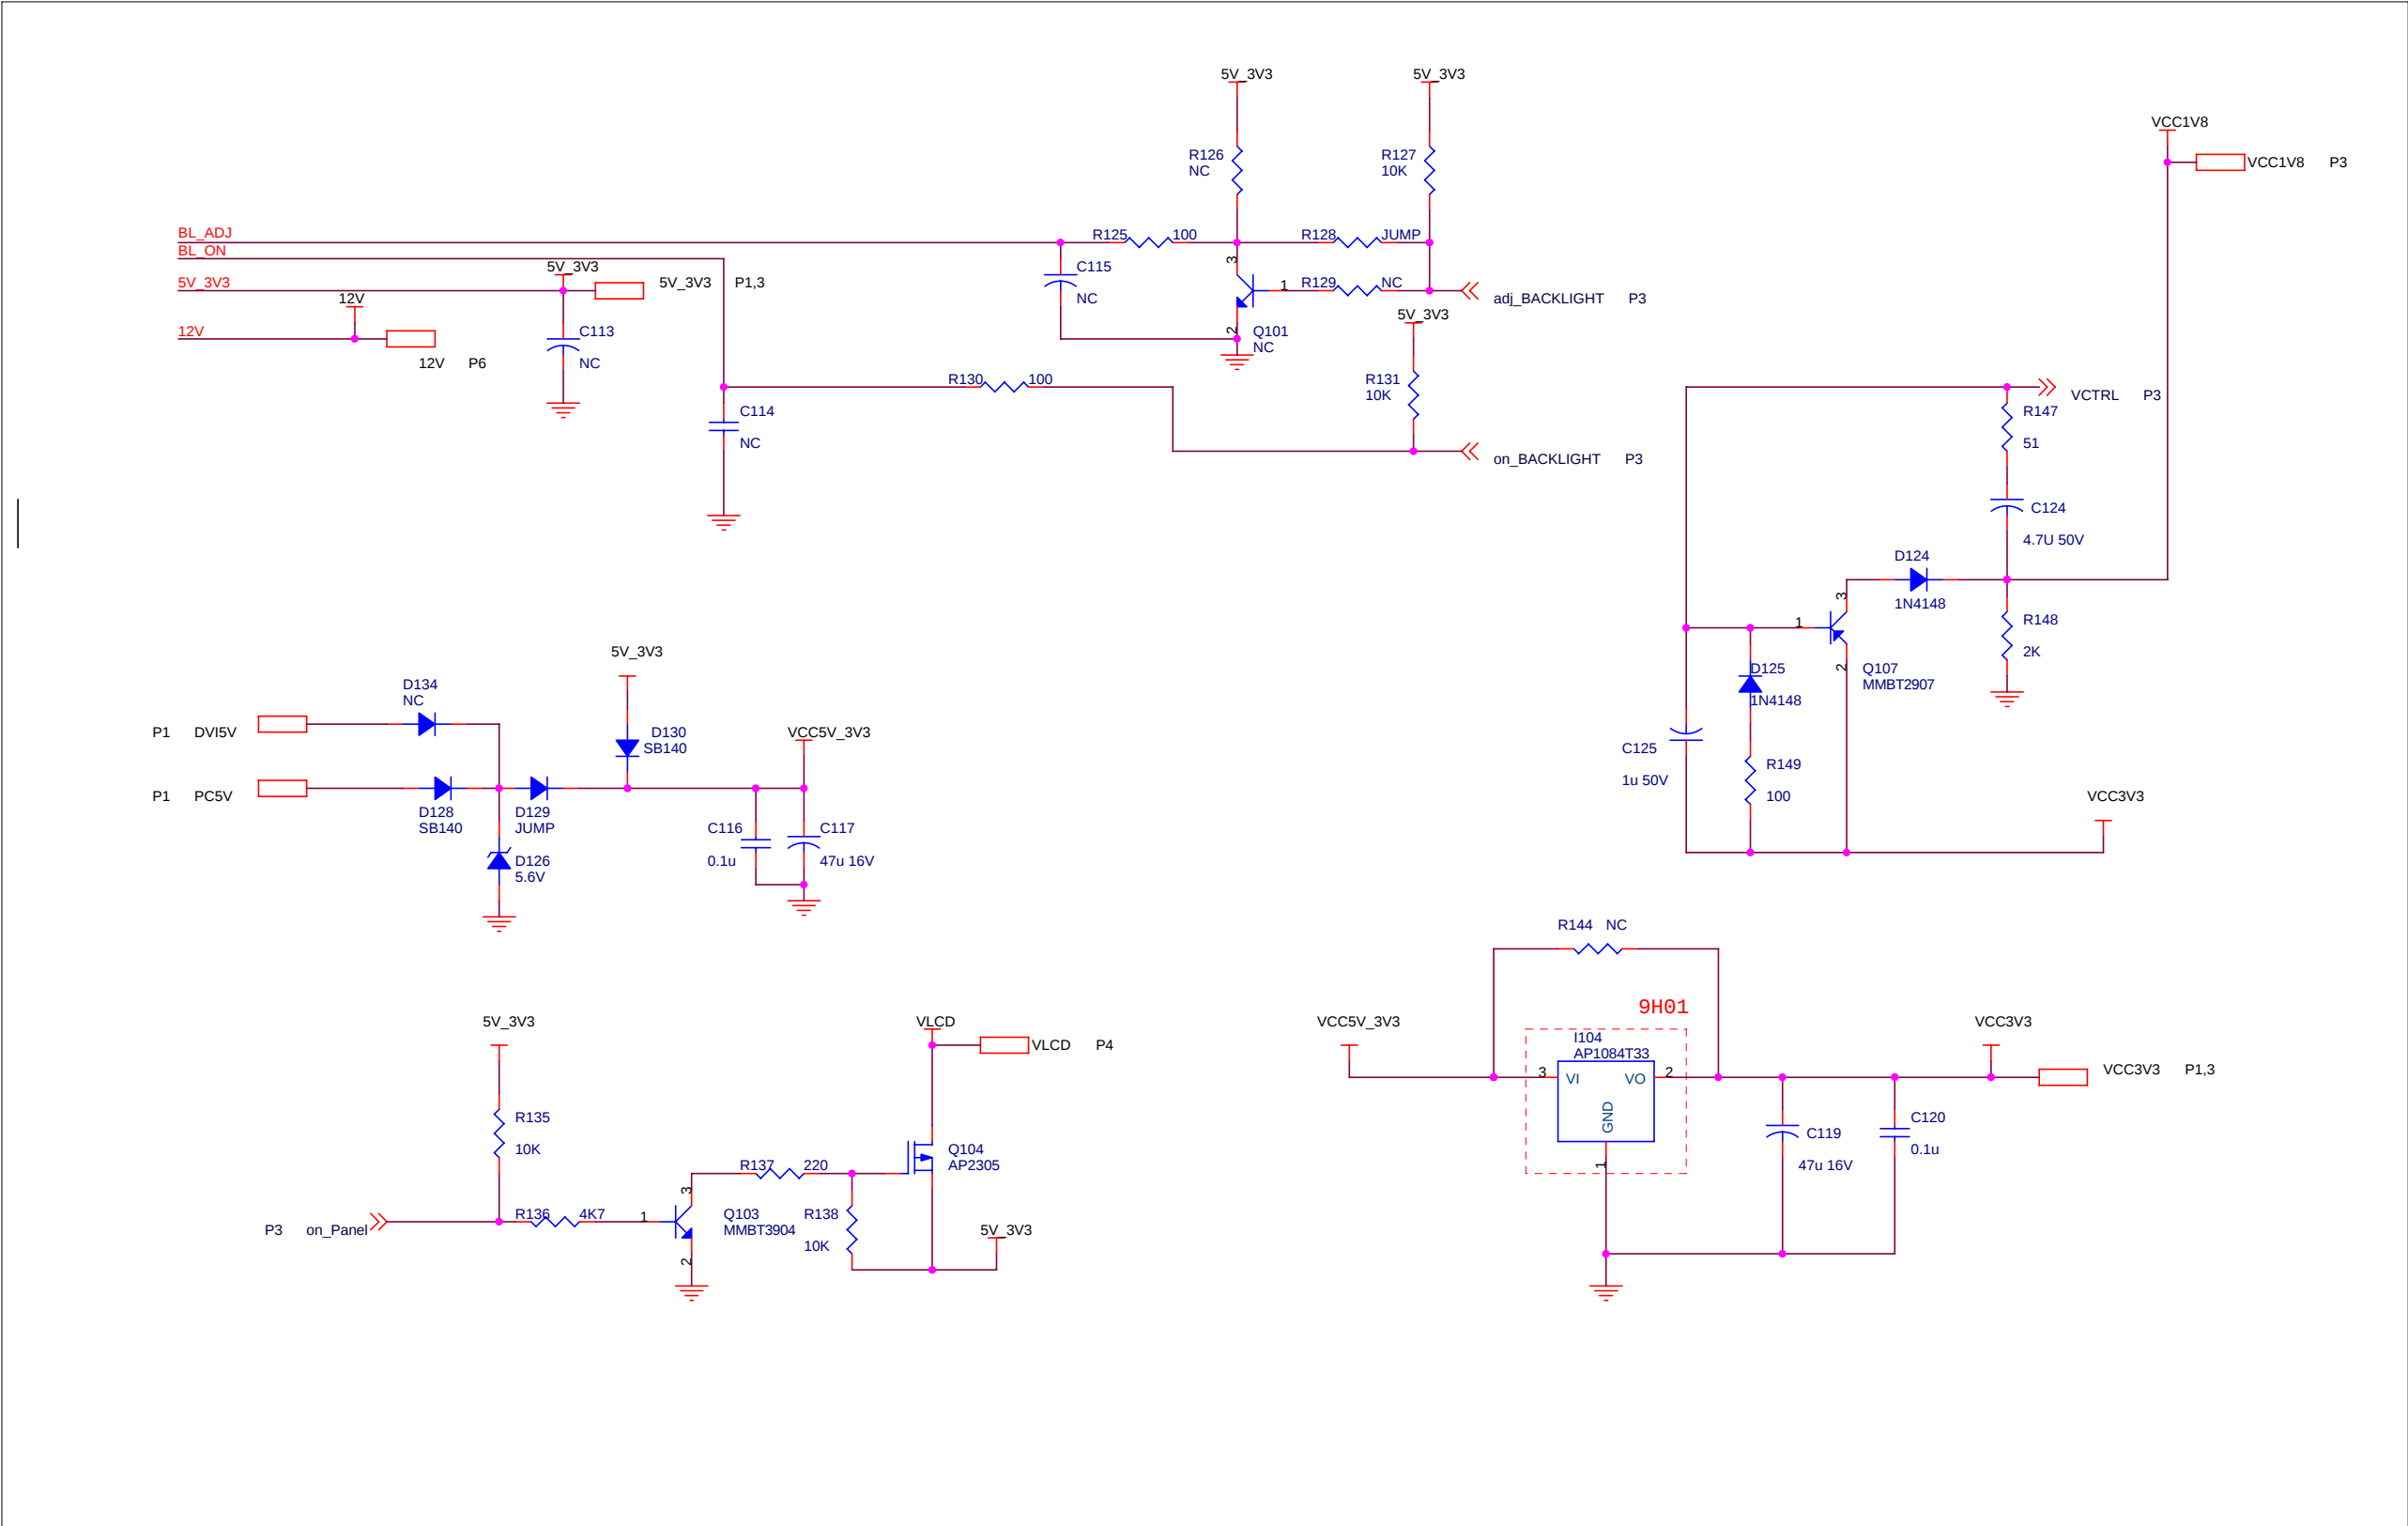


JT198KP4LS4 Service Manual


6.3. Scaler

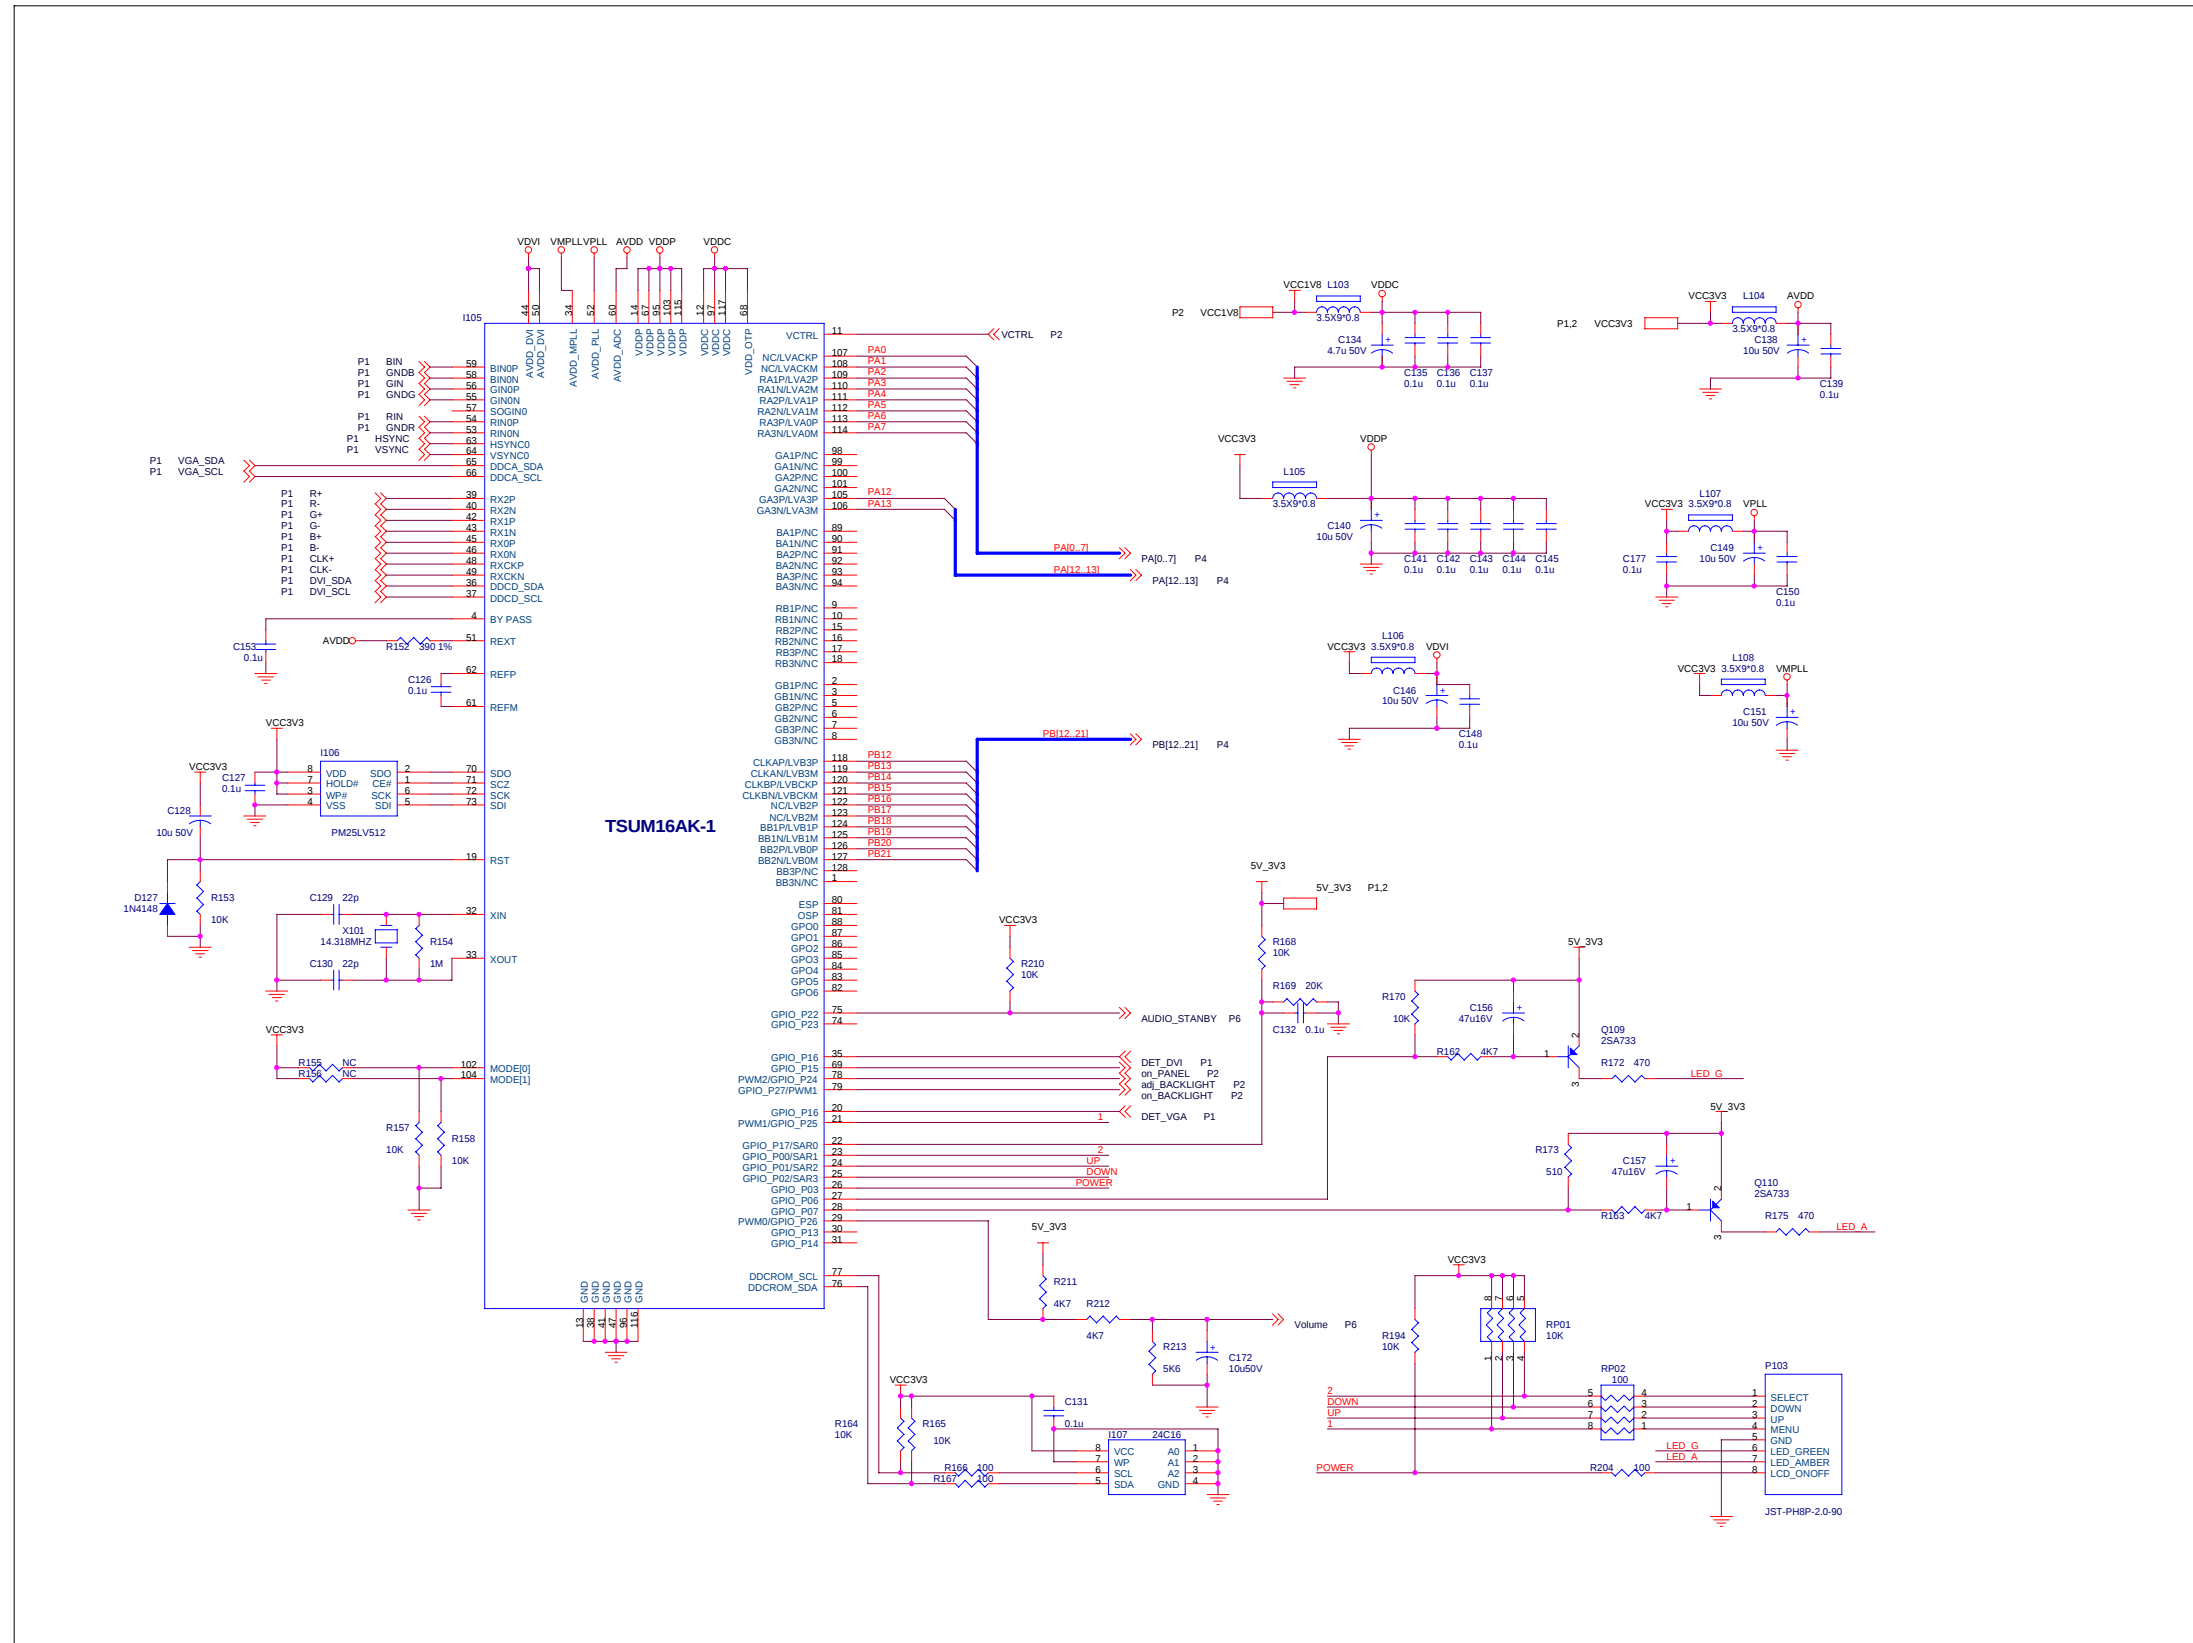

6.4. Panel Interface

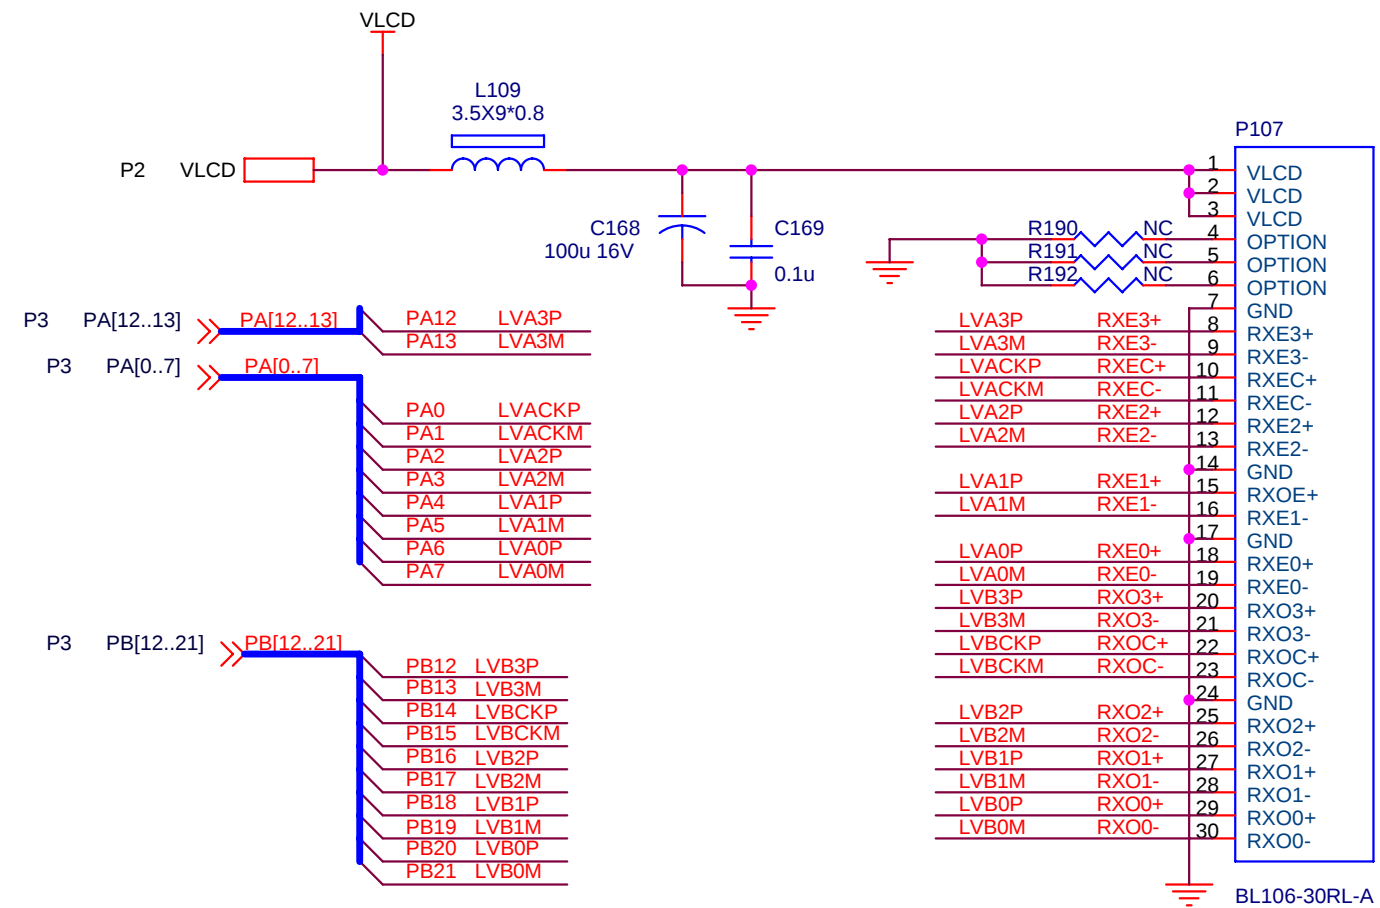


6.5. Key Pad

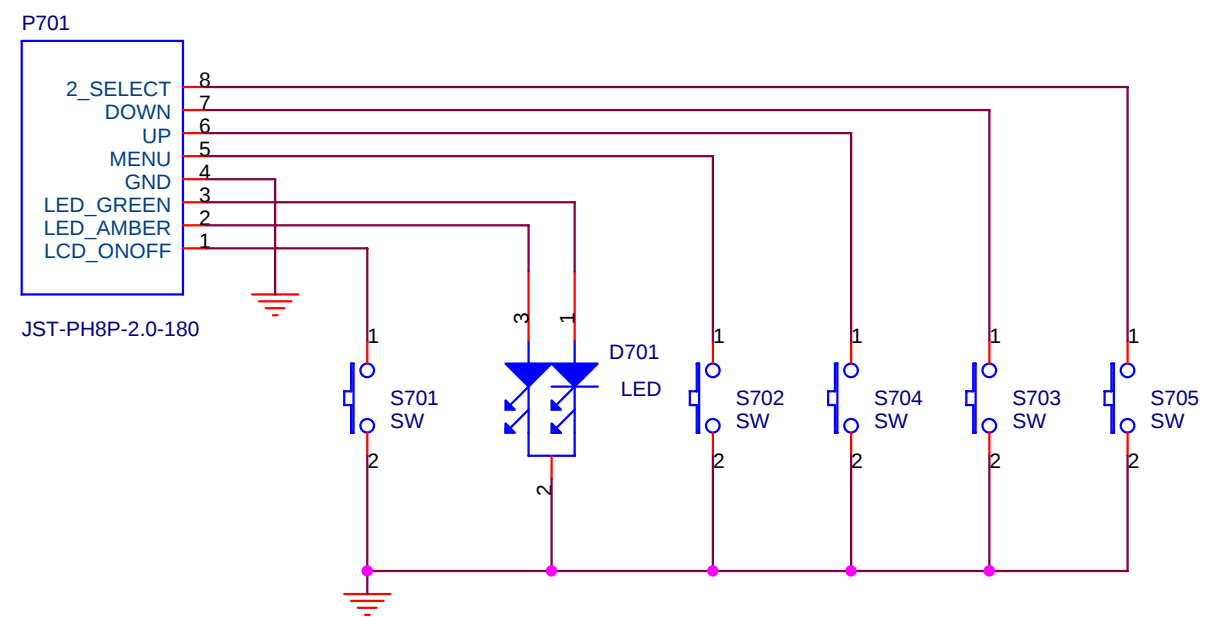


JT198KP4LS4 Service Manual

6.6. Audio

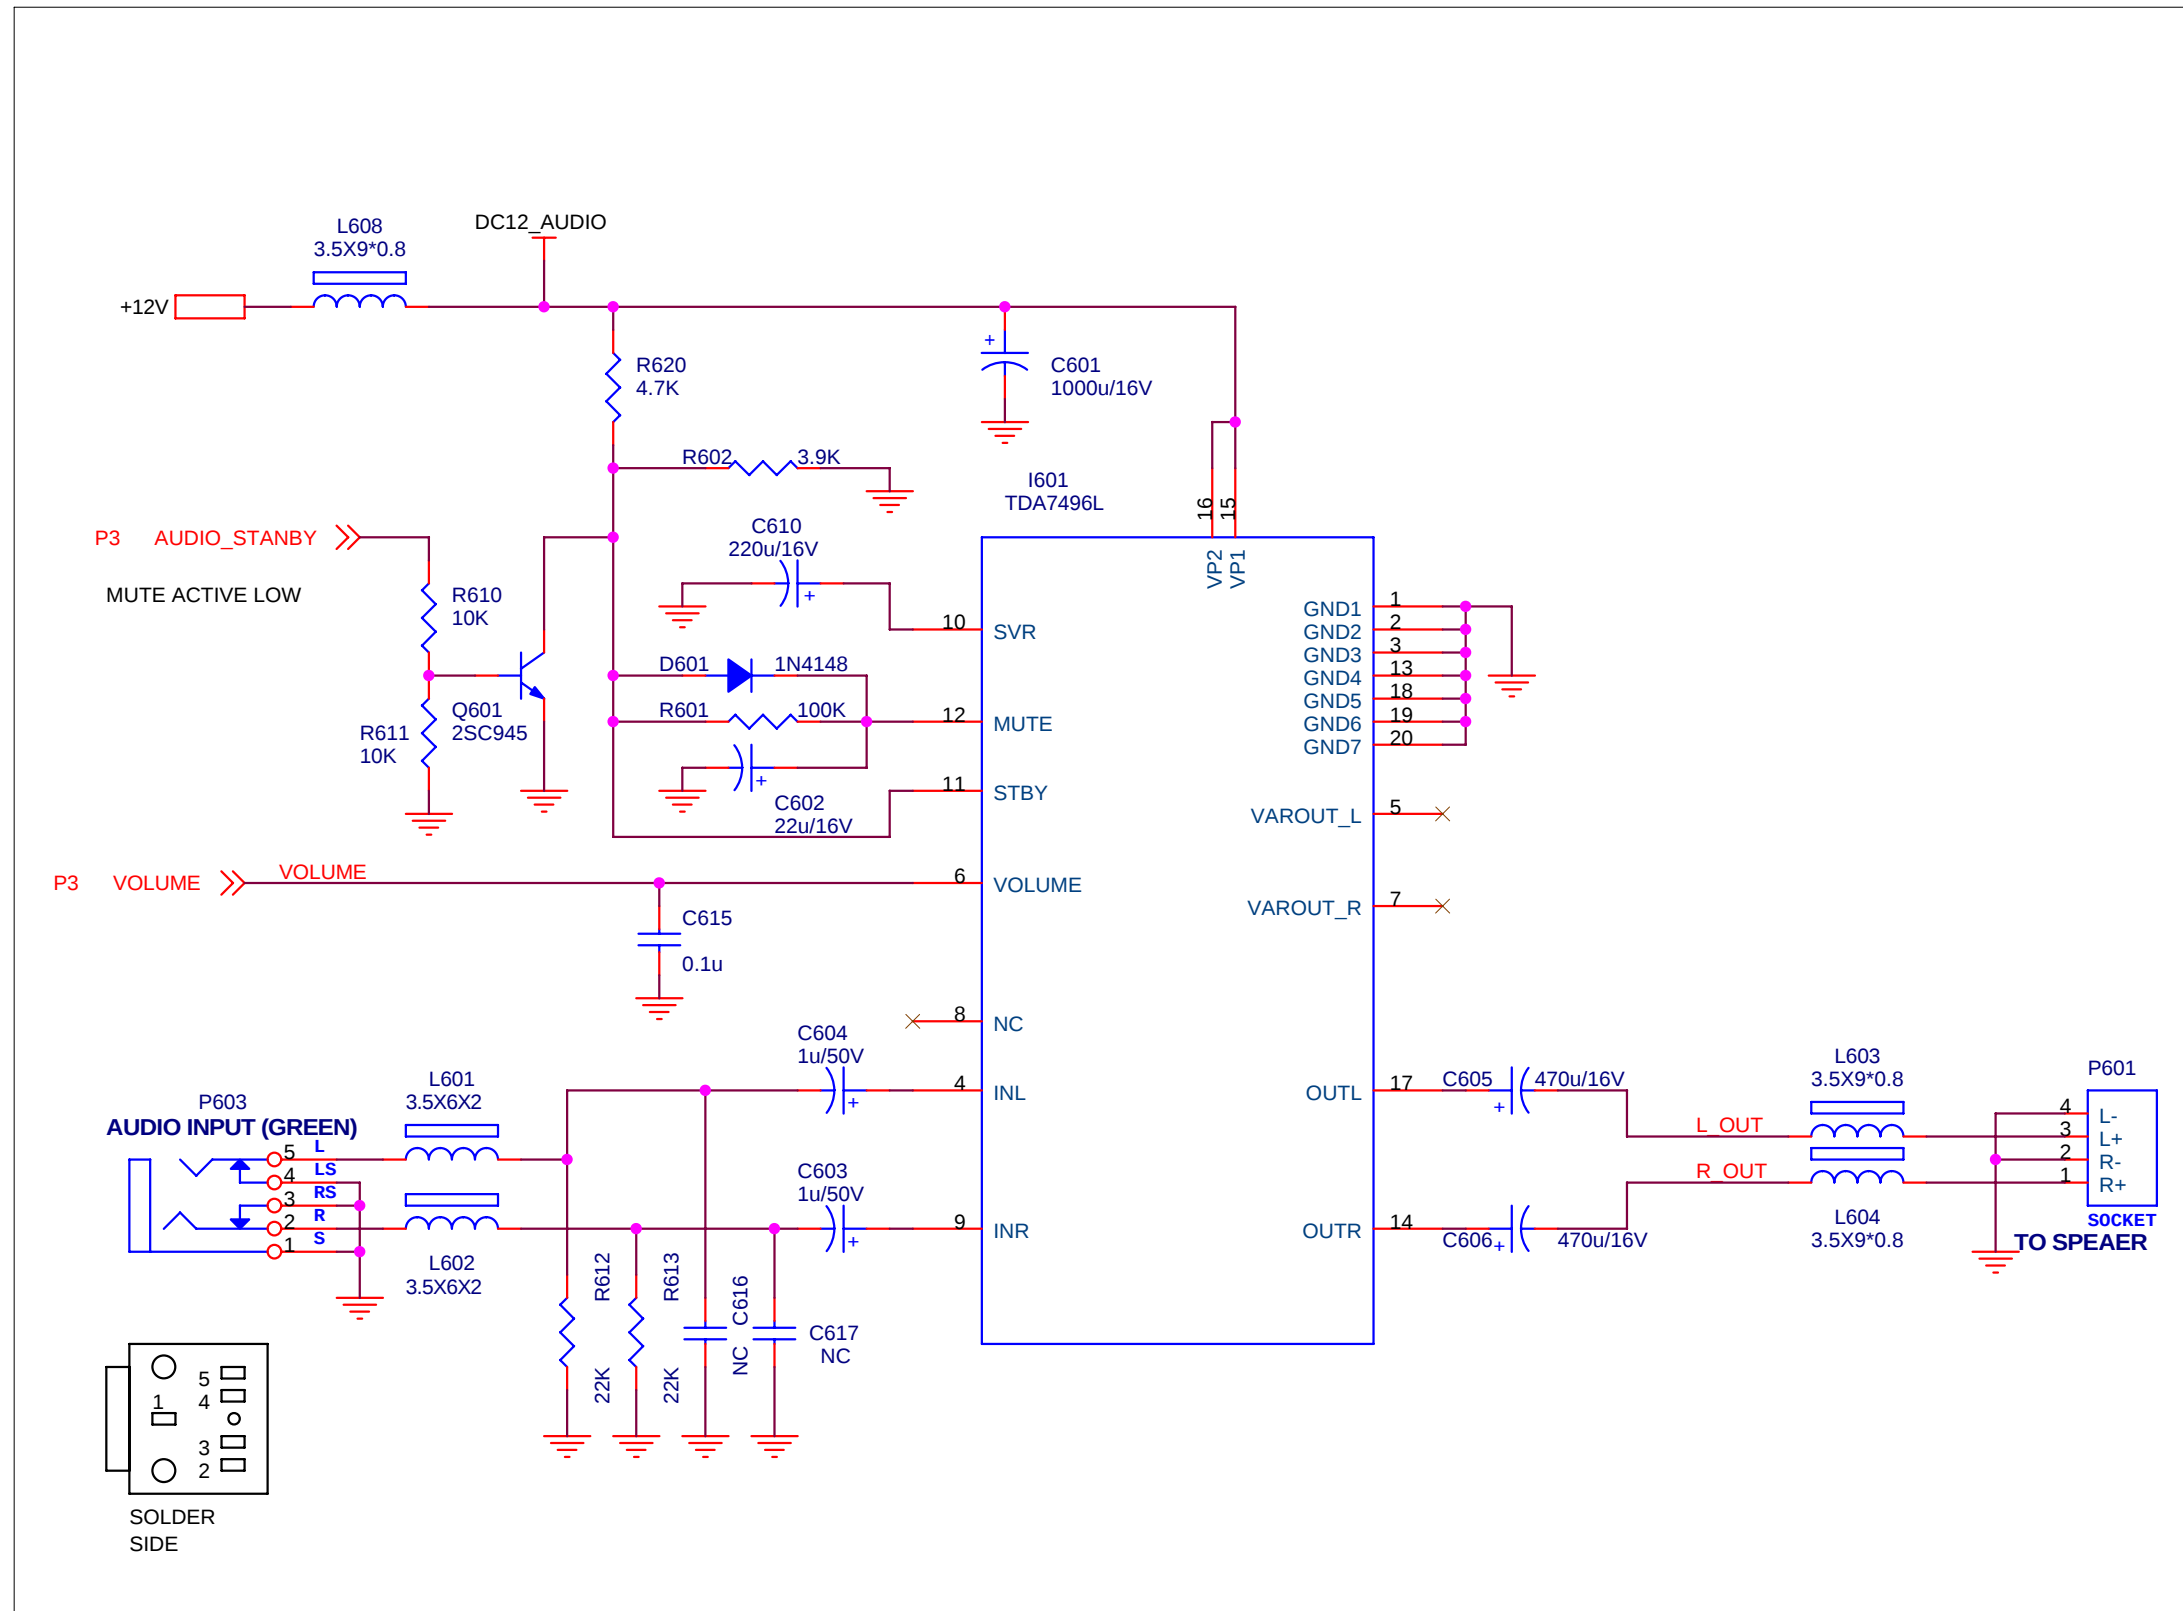

JT198KP4LS4 Service Manual

6.7. Inverter

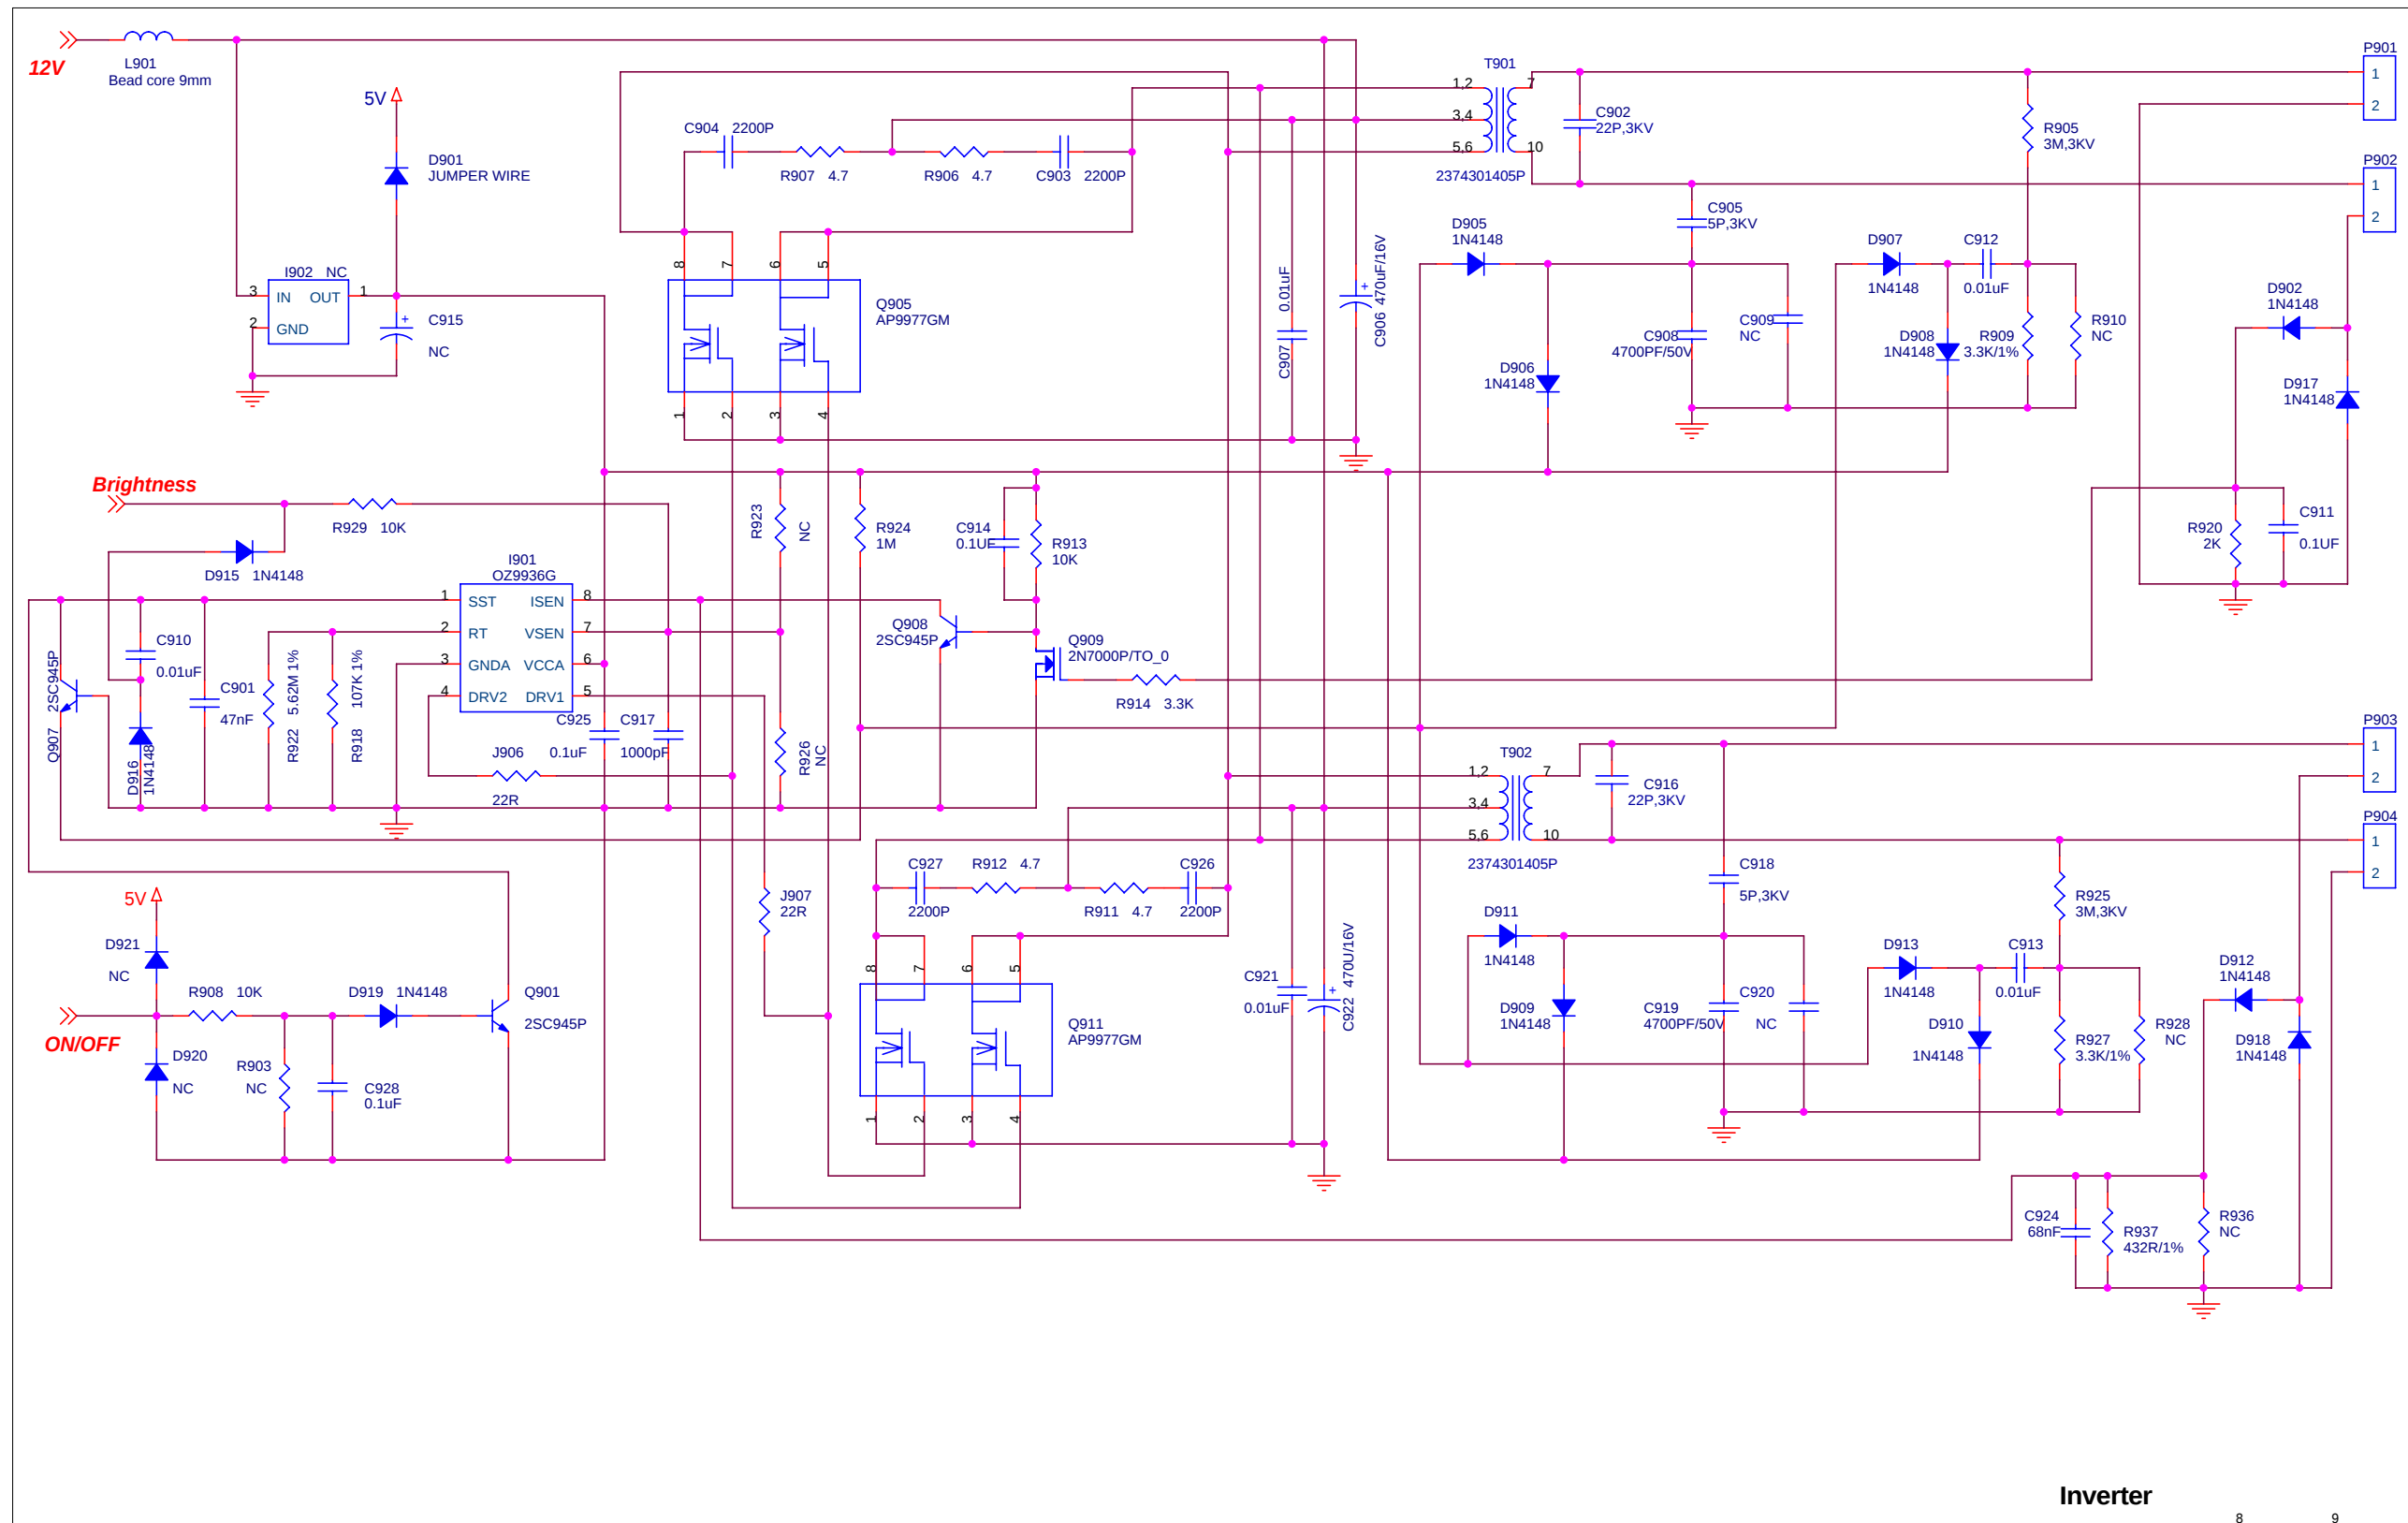

JT198KP4LS4 Service Manual

6.8. Power

