


Service Guide

SW-HF 5.1 6000

Chapter 7. Schematic diagram

SW-HF5.1 AMP PCB

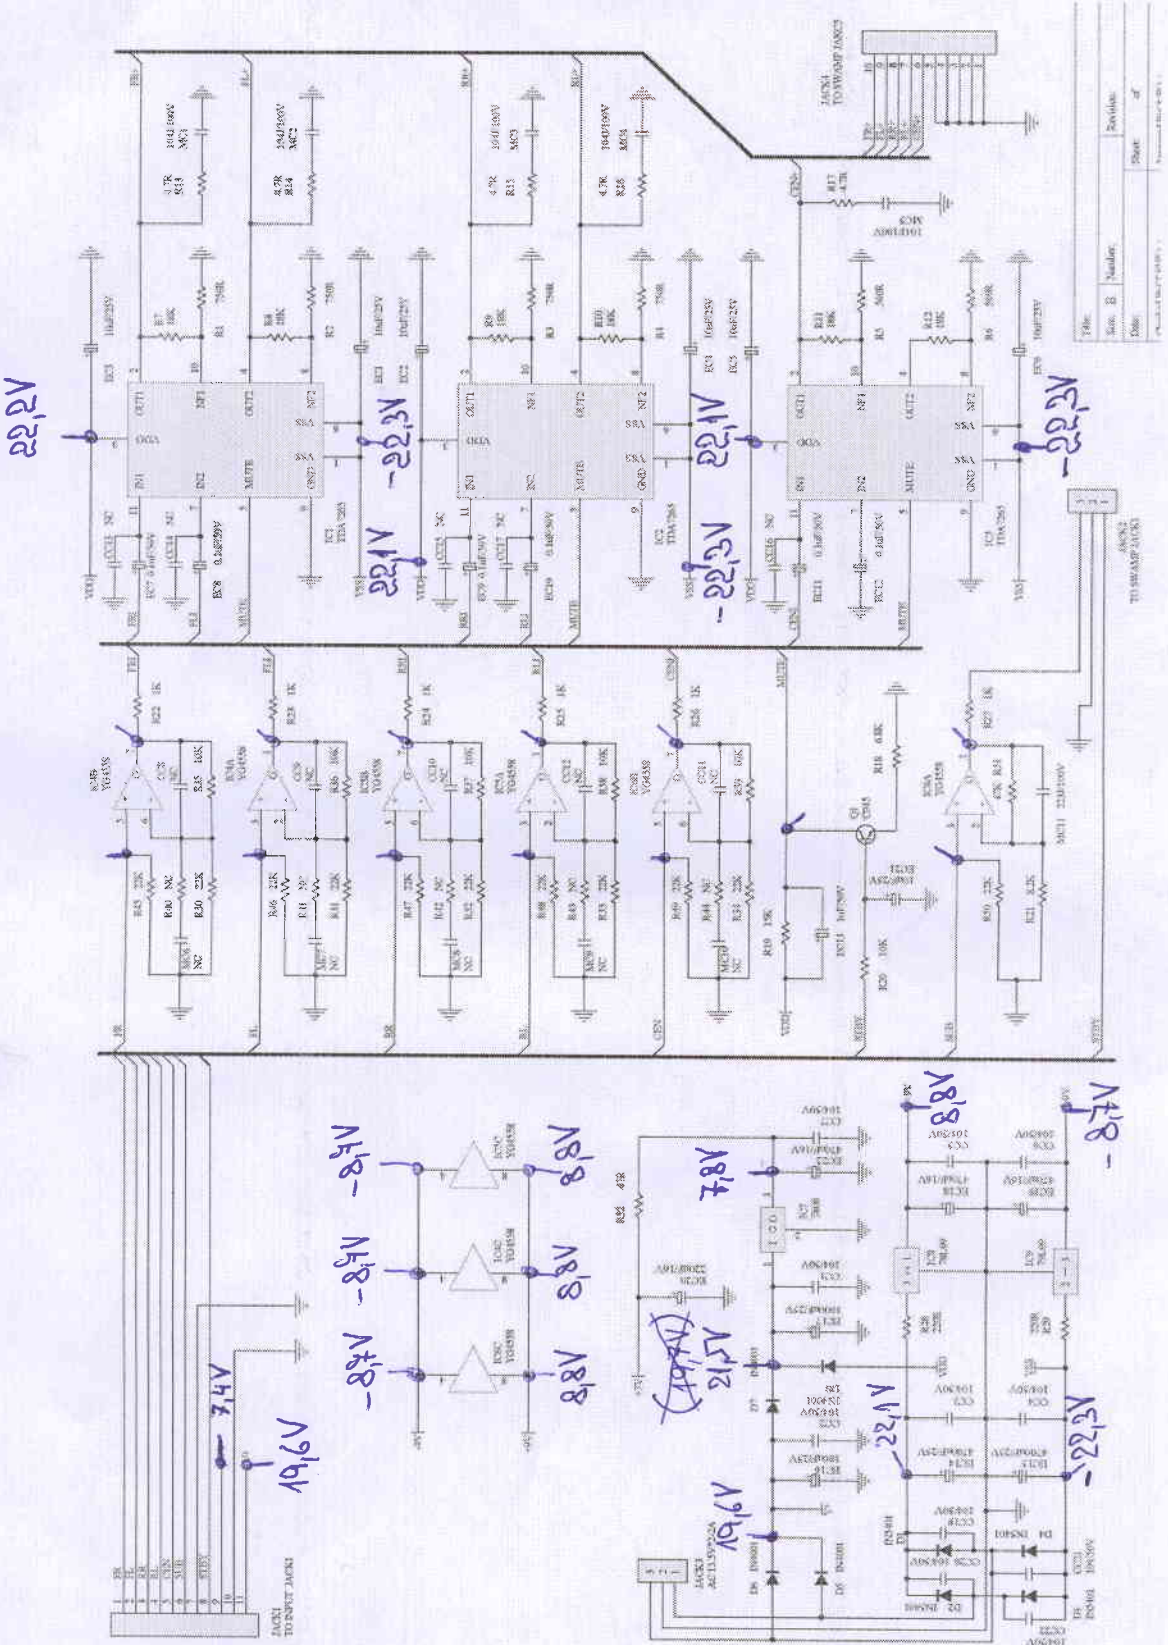

SW-HF 5.1 6000 CON PCB

