
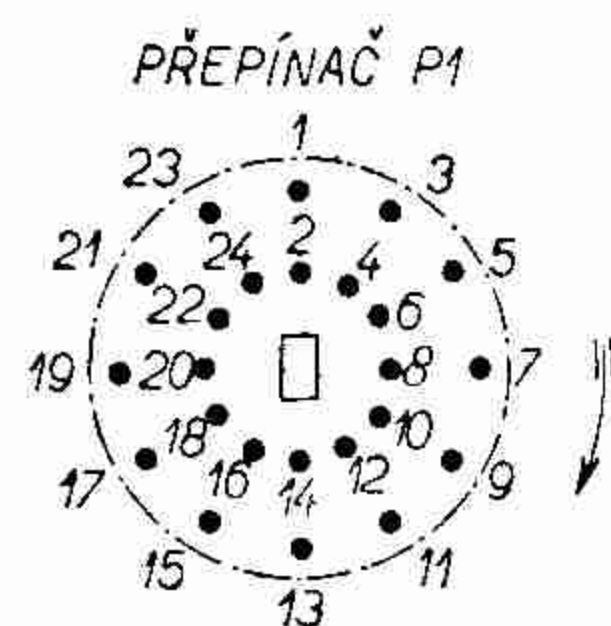



R	1, 2,	9,	3, 8,	5,	6, 12, 11,	13, 7, 4,	14,	15, 18,	17, 16,		
C	16, 25,	13, 27, 28, 29, 45,	17,	43, 26, 30, 18,	32, 20, 14, 31, 33, 34, 35,	19, 21,	44, 22,	42, 38, 37, 36,	23,	39, 24, 40,	46, 41,
L	40,	26, 27, 30, 32, 31, 33,		28, 29, 35, 34,	21, 22,			23, 24, 24,		47, 48,	

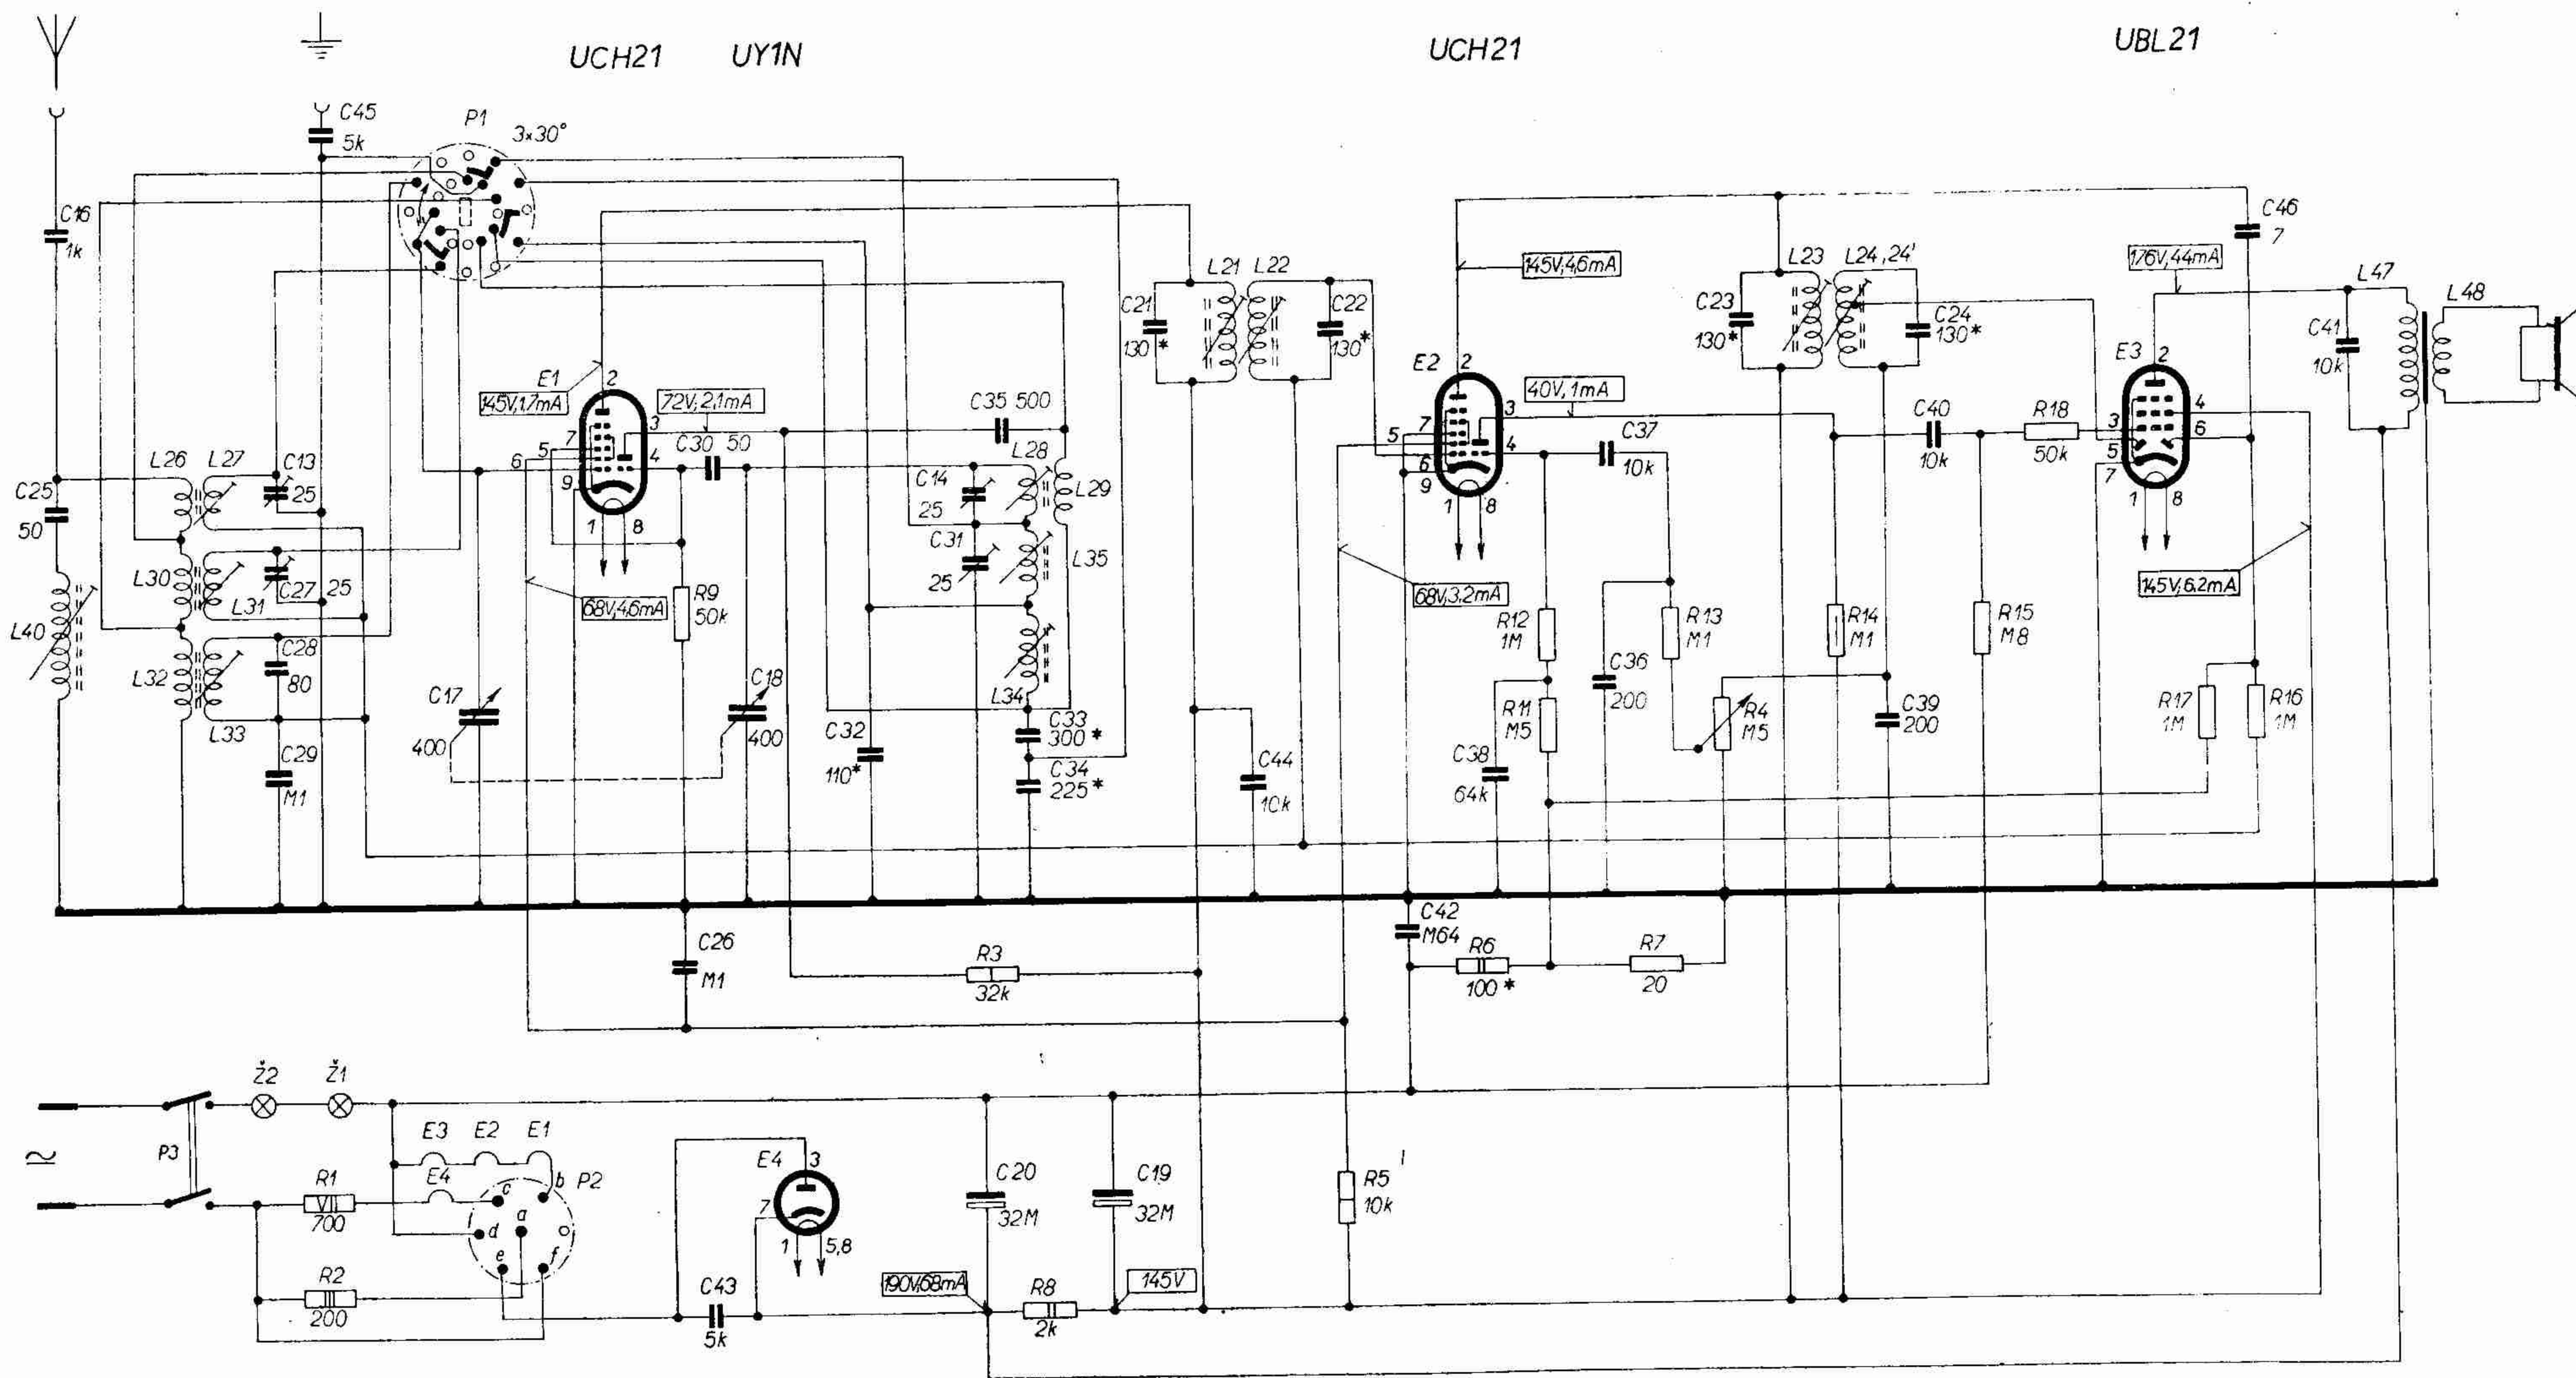

ROZSAH	SPOJENÉ DOTEKY P1
KV	2-3-4, 15-17,
SV	4-5-6, 9-10-12, 17-18,
DV	20-21,

VOLÍČ NAPĚTÍ P2	
NAPĚTÍ	SPOJ. DOTEKY
120V ≈	a-b, c-d, e-f,
220V ≈	a-e, b-c,

PATICE ELEKTRONEK

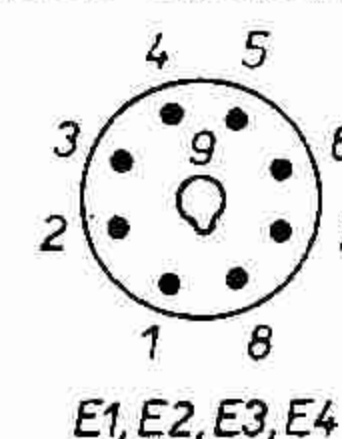

Zapojení přijímačů 305U, 306U, 307U, 308U „TALISMAN“