


Telephone:
Fax:
VAT Registration No.:

S292	AC/Heater function control panel
31	Battery -
30	Battery +
S57	Closed throttle position (CTP) switch
B54	Crankshaft position (CKP) sensor
X1	Data link connector (DLC)
A35	Engine control module (ECM)
K46	Engine control relay
B24	Engine coolant temperature (ECT) sensor
Y104	Evaporative emission (EVAP) canister purge valve
M12	Fuel pump
K20	Fuel pump relay
F	Fuse
B72	Heated oxygen sensor (HO2S)
Y56	Idle speed control (ISC) actuator
A52	Ignition amplifier
T1	Ignition coil
15	Ignition switch - ignition ON
A162	Immobilizer control module
S39	Inertia fuel shut-off (IFS) switch
Y3	Injector
A5	Instrument panel
B25	Intake air temperature (IAT) sensor
R9	Intake manifold heater
K23	Intake manifold heater relay
B69	Knock sensor (KS)
B83	Manifold absolute pressure (MAP) sensor
S231	Power steering pressure (PSP) switch
B147	Throttle position (TP) sensor
B33	Vehicle speed sensor (VSS)

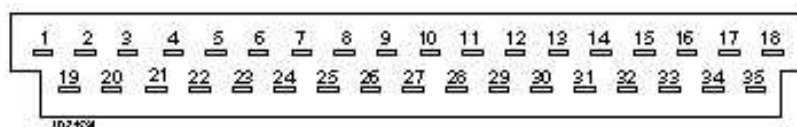

bl = blue	br = brown	el = cream	ge = yellow
gn = green	gr = grey	nf = neutral	og = orange
rs = pink	rt = red	sw = black	vi = violet
ws = white	hbl = light blue	hgn = light green	rbr = maroon
x = braided cable	y = high tension	z = non-cable connection	

NOTE: In certain diagrams (Citroen, Peugeot & Renault), colour codes are replaced by numbers which are used to identify a particular cable and not the colour. In this instance, the cables will be numbered at each end close to the harness connector.

